

NEARNET-GSM WIRELESS SUBSCRIBER UNIT INSTALLATION INSTRUCTIONS

IMPORTANT! Failure to Read and Follow These Installation Instructions May Jeopardize Subscriber Security

INTRODUCTION: The NNT-GSM is a 2-way, fully supervised Wireless Subscriber Unit for use on the nationwide (50 United States plus Puerto Rico and the US Virgin Islands) NEARNET Network. The NEARNET Control Center Processors forward these wireless signals to ANY Central Station via standard communicator techniques. The NEARNET Control Center Processors will generate and report a Communications Failure signal in the event that the network does not receive the expected supervisory test signal from the Wireless Subscriber Unit during the scheduled period.



WARNING: To ensure user's safety and to satisfy FCC RF exposure requirements, this unit must be installed so that a minimum separation distance of 40 cm or 60 cm is always maintained between the antenna of the transmitting device and nearby persons. Operation closer than this distance is not recommended. Use ONLY the following antenna supplied by NEARNET to comply with this warning. **Remote Magnetic Mount Antenna, PN: RMM3DB – 60 cm or Rugged Duck Antenna, PN: RD0DB – 40 cm.**

NOTE: This equipment has been tested and found to comply with the limits for a Class B Unintentional Radiator, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction Manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures: 1. Reorient or relocate the receiving antenna, 2. Increase the separation between the equipment and receiver, 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected, 4. Consult the dealer or an experienced radio/TV technician for help.



GENERAL INSTALLATION GUIDELINES

- Since the mounting location can **ONLY** be selected based on RF performance, it is **HIGHLY** recommended that the installer follow the STEP 1 below **BEFORE** any wires are run.
- Generally, high locations are best. **DO NOT** mount radio in basement or below grade as unpredictable performance may result.
- Whenever possible, **DO NOT** mount the NNT-GSM in non-climate controlled environments (i.e. attics may become extremely hot in summer, garages may become extremely cold in winter).
- Avoid mounting locations within 3 feet of large metal objects (air conditioners, metal garage doors, etc.), AC power lines, and fluorescent light fixtures.
- A fair amount of care may be required to mount the NNT-GSM so as to achieve an optimal RF path. The installer should spend as much time as needed to obtain the highest signal level possible.
- The NNT-GSM draws a substantial amount of current - approximately 2 AMPS - during transmit. Therefore, follow the instructions for powering the NNT-GSM carefully!

STEP 1

SELECT A MOUNTING LOCATION

- Temporarily connect power to the NNT-GSM from a fully charged 12V (4AH minimum) battery. **DO NOT** mount the NNT-GSM at this time. Position the unit in the *desired* mounting location. Wait for the power-up cycle to finish, *this could take a minute*, and the unit will start its blink cycle.
- Press the test button (S1), bottom right hand corner; the unit will transmit one long blink. After the unit transmits observe Coverage LED and count the number of blinks. Move the unit as required to achieve the best Coverage (signal strength) possible based on the chart below. As needed, re-position the unit, transmit and watch the Coverage LED to indicate change. The unit will not transmit if 15 seconds has not passed. There is a 2 second delay between blink cycles.
- Once a location has been selected based on Coverage, permanently and securely mount the unit using #6 screws (not supplied) in at least 2 of the 4 mounting holes.

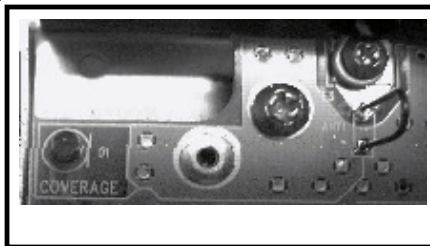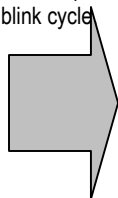


# BLINKS	COVERAGE
0 BLINKS	NO NETWORK-DO NOT INSTALL , Try Re-positioning Unit
1 BLINK	VERY WEAK COVERAGE-DO NOT INSTALL , Try Re-positioning Unit
2 BLINKS	MARGINAL COVERAGE - Try Re-positioning Unit or High-Gain Antenna – INSTALL with CAUTION
3 BLINKS	GOOD COVERAGE SIGNAL-OK TO INSTALL
4 BLINKS	VERY GOOD COVERAGE SIGNAL-OK TO INSTALL
5 BLINKS	EXCELLENT COVERAGE-OK TO INSTALL

STEP 2

APPLY POWER

- The NNT-GSM requires 12VDC. It draws less than 20mA during standby, and almost 2 AMPS during Transmit (for less than 1 second). It is recommended that the NNT-GSM be powered directly from the battery (4AH Minimum) of the alarm control panel, with a 3 AMP fuse in series. As the standby current is very low, the alarm control panel charging circuit will not be affected, and the battery is capable of supplying the 2 AMP current on transmit. **DO NOT** power the NNT-GSM from the aux output of the control panel.
- 22-gauge wire can be used up to 50 feet in length, and 18-gauge wire can be used up to 100 feet in length.
- Connect power to + & - screw terminals. **DO NOT** short wires to metal case.

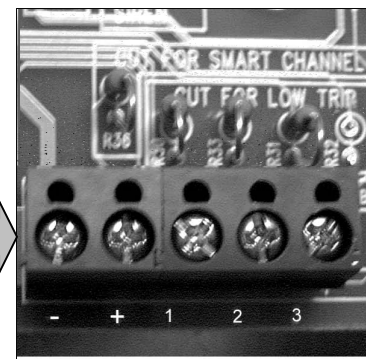

STEP 3

CONNECT INPUTS – CHANNEL TRIGGERING

NOTE: Use any *ONE* method to trigger INPUT #1. Use method “P” or “N” for INPUT 2 and/or 3. All channels triggered by “P” or “N” method have a 1 SEC integration delay. “SC” (SmartChannel) will analyze Bell or Siren Driver output to determine if trigger is BURG or FIRE, and has a 8 SEC integration delay.


After triggering channels, use Signal Verification online at www.alarmpath.com or call NEARNET Toll-Free (866) 252-7672 and access Automated Operator System (Touch-Tone option 5)

SC-BP

SmartChannel (INPUT Terminal 1)
“BELL POSITIVE” TRIGGER

e.g. ADEMCO, NAPCO and others with switched “BELL POSITIVE” terminals

- **CUT** resistor R100 to convert INPUT #1 to SmartChannel (remove power from unit before cutting any jumpers)
- Make sure resistor R101 has **NOT** been cut
- Run wire from NNT-GSM INPUT #1 screw terminal to Alarm Control Panel BELL + terminal
- Steady Voltage (+4.5 to +14.5VDC) on INPUT #1 sends code 1D (BURG), pulsating Voltage (~800mS – 8 SEC/cycle) sends code 1C (FIRE)

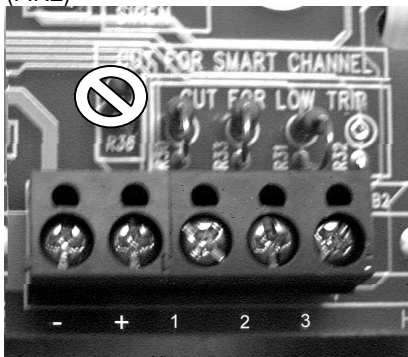


SC-BN

SmartChannel (INPUT Terminal 1)
“BELL NEGATIVE” TRIGGER

e.g. DSC and others with switched “BELL NEGATIVE” terminals

- **CUT** resistor R100 to convert INPUT #1 to SmartChannel (remove power from unit before cutting any jumpers)
- **CUT** resistor R101 to convert INPUT #1 to Low/Negative/Pull-to-ground trigger (remove power from unit before cutting any jumpers)
- Run wire from NNT-GSM INPUT #1 screw terminal to Alarm Control Panel BELL – terminal
- Constant Ground on INPUT #1 sends code 1D (BURG), pulsating Ground (~800mS – 8 SEC/cycle) sends code 1C (FIRE)

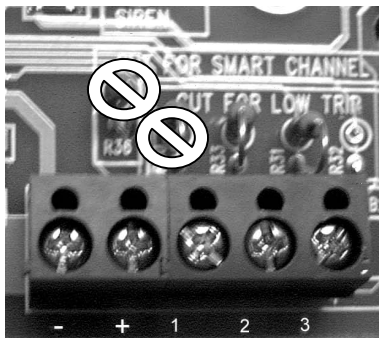

SC-S


SmartChannel (INPUT 1)
“SIREN DRIVER” TRIGGER

e.g. CADDX and other Alarm Control Panels with built-in siren drivers

USE THIS METHOD ONLY IF METHOD SC-BP OR SC-BN CANNOT BE USED

- **CUT** resistor R100 to convert INPUT #1 to SmartChannel (remove power from unit before cutting any jumpers)
- Run wire from NNT-GSM INPUT #1 screw terminal to Alarm Control Panel Built-In Siren Driver terminal. See NOTE below
- Warble Siren Audio Tone (~500hz to 2khz) on INPUT #1 sends code 2D (BURG), Steady Siren Audio Tone (~1khz) sends code 2C (FIRE)

NOTE:
Observe LED D2 to determine correct polarity. D2 will light (steady or blinking) when connected to the correct SIREN terminal

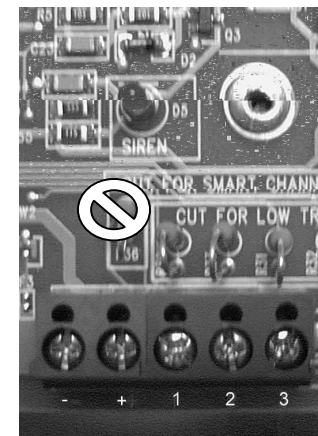

P

“POSITIVE” TRIGGER (INPUT #1, 2 or 3)

e.g. Any “POSITIVE” voltage (+4.5 to 14.5VDC) trigger

- To use this method for INPUT #1, make sure resistor R100 has **NOT** been cut
- Make sure resistor R101, R102, R103 (INPUT #1, 2, 3 respectively) has **NOT** been cut, as applicable
- Run wire from NNT-GSM INPUT #1, 2, 3 screw terminal (as applicable) to Positive trigger (Positive Voltage on alarm)
- INPUT # 1, 2, 3 send codes 1, 2, 3, respectively

N

“NEGATIVE” TRIGGER (INPUT #1, 2 or 3)

e.g. Any “NEGATIVE” or “Pull-to-Ground” trigger

- To use this method for INPUT #1, make sure resistor R100 has **NOT** been cut
- **CUT** resistor R101, R102, R103 (INPUT #1, 2, 3 respectively), as applicable (remove power from unit before cutting any jumpers)
- Run wire from NNT-GSM INPUT #1, 2, 3 screw terminal (as applicable) to Negative/Pull-to-Ground trigger (Goes Negative / “Pulls-to-Ground” on alarm)
- INPUT # 1, 2, 3 send codes 1, 2, 3, respectively

HSO

HIGH-SECURITY OPTION

The NEARNET HSO-KIT includes detailed instructions for wiring the HSO terminal, which provides an output if the NNT-GSM loses coverage.